

Manifold.

## **Manifold**

The manifold consists of a manifold for distribution of hydraulic pressure to the bolt tensioners, indicating gauges and distribution central for the stroke indicators.

The gauges ( $\phi$ 160 mm) are indicating pressure to the bolt tensioner operators.

The manifold can be placed on the floor in cavity or in the center of the carousel.

The manifold can be equipped with air manifold for counter-balance and airdrive.



Subject to alteration without previous notice.

www.tensor.se

Maanifold

Website: